

Quick Start Guide

For more information about how to use the phone, please go to www.alcatelonetouch.com to download complete user manual (English version only). Moreover, from the website you can also consult FAQ (English version only).




This product meets applicable national SAR limits of 2.0 W/kg. The specific maximum SAR values can be found on page 19 of this user guide.

When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 1.5 cm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.

Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Set your phone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

ALCATELone touch.

Your mobile.....

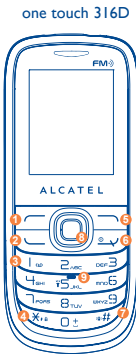

- 1 Left softkey

2 Call log (Idle screen) Send call

3 Voicemail (long keypress)

4 Lock Key (Press * then press key)

5 Right softkey

6 Power on/Power off End call
- 7 Vibration alert

8 Navigation key : Menu/Confirm an option

9 Audio player

10 Dual SIM

Phone

Profiles

Torch (long keypress)

1.1 Keys

- Navigation key
- Confirm an option (press the middle of the key)
- Send call
- Access to call log (idle screen)
- Power on/off the handset (long keypress)
- End call
- Return to idle
- Left softkey
- Right softkey
- Dial the voicemail number (long keypress)
- From Idle screen
 - Short keypress: enter zero
 - Press for twice: +, "+" are used for dialing an international call
- In Edit mode:
 - Short keypress: " " (space) (text edit mode)
 - 0 (Add numbers)
- From Idle screen
 - Short keypress: *
 - Press for twice: Input P/V, "P" and "W" are used for calling the extension
 - Press * then press key: lock keypad
 - Press * then press *: unlock keypad
- In Edit mode:
 - Short keypress: access the Symbols table
- From Idle screen
 - Short keypress: #
 - Long keypress: activate/deactivate the vibrator
- In Edit mode:
 - Short keypress: change input methods
- From Idle screen
 - Short keypress: dial '5'
 - Long keypress: switch on/off the torch

 
1.2 Idle screen icons

- Battery charge level.**
- Meeting mode:** your phone vibrates, but neither rings nor beeps.
- Headset connected.**
- Indoor mode:** your phone rings, but neither vibrates nor beeps.
- Normal mode:** your phone rings, but neither vibrates nor beeps.
- Silence mode:** your phone neither rings, beeps nor vibrates.
- Outdoor mode:** your phone vibrates then rings.
- Alarm clock programmed.**
- Voicemail message arrived.**
- Missed calls.**
- Roaming.**
- Level of network reception.**
- Message unread.**
- Call divert.**
- Message full.**
- MMS unread.**

2 Getting started.....

2.1 Set-up

Removing and installing the back cover



Removing and installing the battery



Inserting and removing the SIM card




Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, push it and slide it out.

one touch 316D, two SIM cards can be inserted. 1 is for SIM1, 2 is for SIM2.

Inserting and removing the TF card



Charging the battery

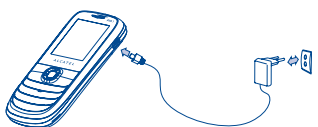

Connect the battery charger to your phone and mains socket respectively.

- The charging may take about 20 minutes to start if the battery is flat.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).
- When using your telephone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery ().

- To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; reduce the backlight time, etc.

The charge is complete when the animation stops.

2.2 Power on your phone

Hold down the key until the phone powers on.

2.3 Power off your phone

Hold down the key from the main screen.

3 Calls

3.1 Making a call

Dial the desired number, press the key and select SIM1 or SIM2 to place the call. If you make a mistake, you can delete the incorrect digits by pressing the .

To hang up the call, press the key.

Making an emergency call

If your phone is covered by the network, dial emergency number and press the key to make an emergency call. This works even without a SIM card and without typing the PIN code or unlocking the keypad.

3.2 Calling your voicemail ⁽¹⁾

To access your voicemail, hold down the key.

You can see SIM1 voice mail and SIM2 voice mail in this menu.

3.3 Receiving a call

When you receive an incoming call, press the key to talk and then hang up using the key.

3.4 Available functions during the call

During a call, you can use your directory, short messages, etc. without losing your correspondent.

4 Call logs.....

You can access your call memory by pressing from the idle screen, or press the key and select the icon from the menu.

4.1 SIM1 call log

In this menu, you will see Dialed call(s), Received call(s), Missed call(s), Rejected call(s) in SIM1.

4.2 SIM 2 call log

In this menu, you will see Dialed call(s), Received call(s), Missed call(s), Rejected call(s) in SIM2.

5 Contacts.....

5.1 Consulting your contacts

To access the directory from the idle screen, press the key and select the icon from the menu. The complete contacts of both SIM1 and SIM2 are available in this menu.

5.2 Adding a contact

Select the directory in which you wish to create a file, press the "Options" softkey, select "New" then .

6 Multimedia.....

6.1 Image browser

You can view the pictures or images through this function.

6.2 Video player

Use this function to play video files. You can press to play/pause the video player, press and to tune volume; short press or to last or next video.

6.3 FM radio

Your phone is equipped with a radio with RDS functionality. You can use the application as a traditional radio with saved channels. In FM radio interface, press * and # to tune volume.

7 Tools.....

7.1 Calculator

Press the up, down, left, right and OK key to select +, -, x, ÷ and = respectively.

Press to delete the figure.

7.2 Recorder

Use this function to record audio files. The phone support WAV. The recording file will be stored in record file list automatically.

7.3 World clock

Access this menu to view time of main cities in various time zones.

7.4 Timer

Set a time, and the timer will remind you as soon as the time run out.

7.5 File management

The phone provides a certain space for users to manage files and support the memory card. The capacity of the memory card is selectable. You can use the file manager to conveniently manage various directories and files on the phone and the memory card.

7.6 STK

STK service is the tool kit of SIM card. This phone supports the service function. The specific items depend on SIM card and network. Service menu will be automatically add into the phone menu when supported by network and SIM card.

8 Messaging

8.1 Create SMS

From the main menu select "Write message" to create text message. You can type a message and select to send it to a recipient in either the SIM1 or SIM2 directory. You can type a message, and you're also able to insert a pre-defined message from "Templates". While writing a message, select "Options" to access all the messaging options.

Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

8.2 Create MMS

Your phone can send and receive MMS in either the SIM1 or SIM2 which enables you to send message containing picture, ring and text.

9 Audio player

Use this function to play audio files. Press to play/pause the audio player, short press or to last or next audio, in audio player interface, press and to tune volume.

10 Profiles

With this menu, you may personalize ringtones for different events and environments.

11 Settings

From the main menu, select the menu icon and select the function of your choice in order to customize your telephone: Call settings, Phone settings, Display settings, Security settings and Connection management.

12 Alarm

Your mobile phone has a built-in alarm clock with snooze feature.

13 Calendar

Once you enter this menu, there is a monthly-view calendar for you to view the date; you can go to any day you want.

14 Camera

The phone is provided with a camera, which supports the photographing functions. Roll the phone to align the camera to the picture and then press key to capture photos. Pictures will be saved in the file system of the phone or the memory card. You can access the options after entering the camera mode.

15 Torch.....

To light in darkness, you may activate "Torch" by below operations:














































Select to turn on/off the torch light through in this interface;

In idle screen, long keypress key to activate or deactivate the Torch light.

⁽¹⁾ Contact your network operator to check service availability.

16 Input mode.....

To write messages, there are two writing methods:

- Normal: this mode allows you to type a text by choosing a letter or a sequence of characters associated with a key. Press the key several times until the desired letter is highlighted. When you release the key the highlight character is inserted into the text.
- Predictive with the C-Star mode: this mode speeds up the writing of your text. Write the word by pressing a key between  and . Press the key once and the word will be modified each time you press a key. As you go on, the word will keep changing. Example: For "Yesterday", press on the following keys:                                            Yesterday

- 